Let's Get Your Camera Ready!



1

Remove the Plastic • Carefully peel off the plastic cover by

lifting it from one of the corners. Make sure to avoid touching the camera lens directly to prevent smudging.



2

Locate the two dotted triangles on the back of your camera device.

Remove the Back Cover


- Push down on the dotted triangle to release and remove the back cover.



compartment.

Insert Batteries

• Insert 4 AA batteries into the battery

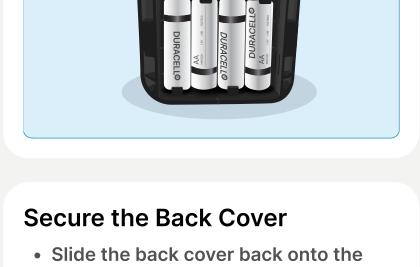

SMC41110T

Approximation

OCCUPANT

Approximation

OCCUPANT

Approximation

Appro

Ensure the Camera is Powered

Check the indicator light—you should

confirm the camera is powered on.

see a solid green light for 3 seconds to

camera until it clicks into place,

ensuring it is securely fastened.

On



If Pairing Mode doesn't activate — Press and hold the pair button for 3

device to put the camera in Bluetooth pairing mode.

seconds on the side of the camera



Got it